

# TONE YOUR WAY



PROJECT DIANA



## PROJECT DIANA

#### DESCRIPTION

- 100% analog bucket-brigade technology.
- Up to 600ms of delay with modulation.
- Tap tempo functionality.

between presets

- Six favorite presets.
- · Parallel mode relay switching.
- True Bypass.

#### CONTROLS

CHORUS knob sets width of modulation.

2 LEVEL knob controls ratio of wet and dry signal. 1 CHORUS 3 DELAY knob sets delay time. 2 3 FEEDBACK knob sets number of repeats. DELAY 4 TEMPO LED indicates tempo speed. **Ur**oiec 5 PRESET LED indicates selected preset. 6 BYPASS footswitch toggles effect on/bypass 7 8 BYPASS TAP footswitch sets tempo of repeats/switch

### POWER

The Vs Audio Straight Flush is powered by any 9 volt AC adapter or any multi-power supply brick for effect pedals (recommended power supply output 9V DC 200mA) center negative polarity.

LEVEL

FEEDBACK

#### OPERATION

- For MONO use, run a cable from your guitar to the INPUT jack and run another cable from the OUTPUT 1 (upper left) jack to your amplifier.
- For STEREO use, run a cable from your guitar to INPUT jack, then antother cable from OUTPUT 1 (upper left) jack to your amplifier and one from OUTPUT 2 (low left) jack to your second amplifier.
   Strat with all controls at 12 or clack.
- Turn the effect on by pressing the BYPASS footswitch. Parallel mode relay switching behaves like a standard footswitch plus the "HOLD-RELEASE" teature. Press the BYPASS relay switch instantly, the effect turns on, release the switch instantly and the effect is bypassed.
- Rotate the DELAY knob clockwise to increase delay time of the effect or counterclock wise to decrease it. This control overrides the tempo set by TAP footswitch.
- Rotate the FEEDBACK knob clockwise to increase the number of the repeats or counterclockwise to decrease it.
- · Rotate the CHORUS knob clockwise to widen modulation effect or counterclockwise to narrow it.
- · Rotate the LEVEL knob clockwise to increase the ratio of wet dry signal or counterclockwise to decrease it.
- To set the tempo of the repeats, tap at least twice on the TAP footswitch to the desired rhythm.

#### ADVANCED OPERATION

Project Diana has the ability to save and recall up to six different presets, each preset has its own LED color indication: BLUE, GREEN, YELLOW, RED, WHITE and PURPLE.

#### PRESET MODE & LIVE MODE

The effect has two modes that you can select from

In LIVE MODE all the control knobs and the TAP footswitch behave as normal (PRESET LED is OFF).

In PRESET MODE all the control knobs don't alter the sound of the selected preset (PRESET LED is ON).

- To engage PRESET MODE and to recall your favorite preset, press the BYPASS footswitch to engage the
  effect then press and hold the TAP footswitch, (PRESET LED indicator turns ON).
- To change between presets press the TAP footswitch, (PRESET LED indicator changes color).
- To return to LIVE MODE press and hold the TAP footswitch, (PRESET LED indicator turns OFF).

Remember that when you are in PRESET MODE, you can change presets even if the effect is disengaged.

#### SAVING YOUR FAVOURITE PRESET

- · Enter PRESET MODE and choose the preset color you want to edit.
- Exit PRESET MODE and adjust DELAY, FEEDBACK, LEVEL and CHORUS knobs as desired.
- Press and hold both BYPASS and TAP footswitch at the same time. (PRESET LED indicator blinks three times).
   Your favorite PRESET is saved under the preselected colour.

Remember that all your presets are retained even if you unplug the power adaptor.

#### FACTORY PRESETS







#### SPECIFICATIONS

Input Impedance	ΊΜΩ
Output Impedance	10kΩ
Noise Floor	-96dBV
Delay Time	40ms to 600ms
Modulation Speed	1.0 Hz
Bypass	True Relay Switched
Current Draw	65 mA
Power Supply	9volts DC



4 MAVROMATEON Str, ILION ATHENS, GREECE